TWN4 MULTITECH 2 LEGIC

USER MANUAL





TABLE OF CONTENTS

1		INTRODUCTION	3
	1.1	ABOUT THIS MANUAL	3
	1.2	SCOPE OF DELIVERY	3
	1.3	ELATEC SUPPORT	3
2		INTENDED USE	4
3		SAFETY INFORMATION	5
4		TECHNICAL DATA	7
	4.1	TECHNICAL SPECIFICATIONS	7
	4.2	FIRMWARE	7
	4.3	ANTENNAS	7
5		MODE OF OPERATION	8
	5.1	OPERATING MODE	8
	5.2	POWER UP	8
	5.3	ENUMERATION	8
	5.4	INITIALIZATION	8
	5.5	NORMAL OPERATION	8
	5.6	DETECTION OF A TRANSPONDER	8
	5.7	SUSPEND MODE	9
6	COMPLIANCE STATEMENTS		10
	6.1	EU	10
	6.2	FCC	10
	6.3	ISED CANADA	10
	6.4	RF EXPOSURE COMPLIANCE	11
	6.5	SINGAPORE	11
	6.6	THAILAND / ประเทศไทย	11
	6.7	UNITED KINGDOM	11
ΑF	PEN	IDIX	12
	A –	RELEVANT DOCUMENTATION	12
	B – TERMS AND ABBREVIATIONS		
	_	PEL WOLDAN LINGTONY	



1 INTRODUCTION

1.1 ABOUT THIS MANUAL

This user manual is intended for the user and enables a safe and appropriate handling of the product. It gives a general overview, as well as important technical data and safety information about the product. Before using the product, the user should read and understand the content of this user manual.

For the sake of better understanding and readability, this user manual might contain exemplary pictures, drawings and other illustrations. Depending on your product configuration, these pictures might differ from the actual design of your product.

The original version of this user manual has been written in English. Wherever the user manual is available in another language, it is considered as a translation of the original document for information purposes only. In case of discrepancy, the original version in English will prevail.

1.2 SCOPE OF DELIVERY

Depending on your product configuration, the product can be delivered alone or with different components and accessories, such as cables or wall holders, as part of a kit. For more information about the delivered components and accessories, refer to your delivery note, consult the ELATEC website or contact ELATEC.

1.3 ELATEC SUPPORT

In case of any technical questions or product malfunction, refer to the ELATEC website (www.elatec.com) or contact ELATEC technical support at

support-rfid@elatec.com

In case of questions regarding your product order, contact your Sales representative or ELATEC customer service at info-rfid@elatec.com



2 INTENDED USE

The contactless RFID readers and modules of the ELATEC TWN4 MultiTech 2 LEGIC family are a direct enhancement of the TWN4 MultiTech LEGIC readers with the same form factors (PCB modules and desktop readers with housing). During the development of the TWN4 MultiTech 2 LEGIC family, special emphasis has been placed on optimizing the HF performance (13.56 MHz). Compared to the predecessor TWN4 MultiTech LEGIC, the read range could be increased by more than 50% for LEGIC transponders and even doubled for some HF transponders.

TWN4 MultiTech 2 LEGIC key features include a powerful SDK for writing apps that are executed directly on the reader, the possibility to upgrade the firmware in the field, a direct chip-commands support and an optimized BLE module. Additionally, the reader can simultaneously read more than 60 RFID technologies from low (LF) and high frequency (HF) bands, including NFC. This gives the option to select as many of the technologies required instead of being forced to select just a few ones.

The product is for indoor use and may not be used outdoor.

Any use other than the intended use described in this section, as well as any failure to comply with the safety information given in this document, is considered improper use. ELATEC excludes any liability in case of improper use or faulty product installation.



3 SAFETY INFORMATION

Transport and storage

• Observe carefully the transport and storage conditions described on the product packaging or other relevant product documents (e.g. data sheet).

Unpacking and installation

- Before unpacking and installing the product, this user manual and all relevant installation instructions must be read and understood carefully.
- The product is equipped with a cable.
 - Do not twist or pull the cable.
 - O Do not replace the cable and do not use a cable extension.

ELATEC excludes any liability for damages or injuries resulting from the use of the product with a cable extension or a replaced cable.

Handling

- Depending on your product configuration, the product might be equipped with one or more light-emitting diodes (LED).
 Avoid direct eye contact with the blinking or steady light of the light-emitting diodes.
- The product has been designed for a use under specific conditions, e.g. in a specific temperature range (refer to the product data sheet).
 - Any use of the product under different conditions might damage the product or alter its reading performance.
- The use of other RFID readers or reader modules in direct vicinity to the product, or in combination with the product might damage the product or alter its reading performance. In case of doubts, contact ELATEC for more information.
- The user is liable for the use of spare parts or accessories other than the ones sold or recommended by ELATEC.
 ELATEC excludes any liability for damages or injuries resulting from the use of spare parts or accessories other than the ones sold or recommended by ELATEC.
- Like most electronic devices, RFID systems generate electromagnetic waves that can vary in amplitude and frequency. It is generally known and accepted that some RFID devices might potentially interfere with personal medical devices, like pacemakers or hearing aids.
 - TWN4 MultiTech 2 LEGIC fulfills general radio and EMC requirements. However, users with a pacemaker or any other medical device should use TWN4 MultiTech 2 LEGIC carefully and refer to the information given by the manufacturer of their medical devices before using TWN4 MultiTech 2 LEGIC or any host device containing TWN4 MultiTech 2 LEGIC.

Maintenance and cleaning

- Any repair or maintenance work should be done by a trained and qualified personnel only.
 Do not try to repair or carry out any maintenance work on the product by yourself.
 Do not allow any repair or maintenance work on the product by an unqualified or unauthorized third party.
- The product does not need any special cleaning. However, the housing may be carefully cleaned up with a soft, dry cloth and a
 non-aggressive or non-halogenated cleaning agent on the outer surface only.
 Make sure that the used cloth and cleaning agent do not damage the product or its components (e.g. label(s)).



Disposal

• The product must be disposed of in accordance with the EU directive on waste electrical and electronic equipment (WEEE) or any applicable local regulations.

Product modifications

The product has been designed, manufactured and certified as defined by ELATEC.
 Any product modification without prior written approval from ELATEC is prohibited and considered improper use of the product. Unauthorized product modifications may also result in the loss of product certifications.

If you are unsure about any part of the safety information above, contact ELATEC support.

Any failure to comply with the safety information given in this document is considered improper use. ELATEC excludes any liability in case of improper use or faulty product installation.



4 TECHNICAL DATA

4.1 TECHNICAL SPECIFICATIONS

FREQUENCY	125 KHZ (LF) / 13.56 MHZ (HF) / 2.4 GHZ (BLE)
ANTENNA(S)	Integrated
HOUSING	Material: ABS UL94-V0
HUUSING	Color: black or white
DIMENSIONS (L X W X H)	Approx. 88.00 x 56.00 x 18.50 mm / 3.46 x 2.20 x 0.73 inch
	USB: 4.3 V - 5.5 V
POWER	RS-232: requires 5 V external power supply
	PS2 classified power source according to IEC 62368-1, short-circuit current < 8 A
CURRENT CONSUMPTION	RF field on: 140 mA typically
TEMPERATURE RANGE	Operating: -25 °C up to +70 °C (-13 °F up to +158 °F)
TEIWI ETATORE TANGE	Storage: -40 °C up to +75 °C (-40 °F up to +167 °F)
RELATIVE HUMIDITY	5% to 95% non-condensing
READ/WRITE DISTANCE	LF and HF: up to 100 mm / 4 inch, depending on environment and transponder
NEAD/WITTE DISTANCE	BLE: up to several meters/feet
WEIGHT	Approx. 120 g / 4.23 oz (with cable)

4.2 FIRMWARE

The product is delivered ex-works with a specific firmware version. Refer to the label attached to the product to find the firmware version installed ex-works.

4.3 ANTENNAS

The reader is equipped with the following antennas:

HF antenna (13.56 MHz)

Dimensions: 42 x 47 mm / 1.65 x 1.85 inch Number of turns: 3

LF antenna (125 kHz)

Diameter: 16 mm / 0.63 inch Number of turns: 120

BLE (2.4 GHz)

The reader is equipped with a BLE SAM card*.

* It is strictly prohibited to take the BLE SAM card out of the SAM slot. Removing the BLE SAM card is considered as an unauthorized product modification and improper use of the product, which may result in the loss of product certifications. ELATEC excludes any liability in case of unauthorized product modification or improper use of the product.

For more information, refer to the related product data sheet or other technical documents.



5 MODE OF OPERATION

The mode of operation described in the following chapter is based on a standard ELATEC RFID reader equipped with two LEDs. Depending on your product (number of LEDs, installed firmware, etc.) and in case the product settings have been modified with the AppBlaster tool, the information below might differ from your product configuration when in operation. In particular, the color and sequence of the LEDs on your product might be different.

5.1 OPERATING MODE

In order to start operating TWN4 MultiTech 2 LEGIC, it simply has to be connected directly to a host device.

5.2 POWER UP

Once TWN4 MultiTech 2 LEGIC is connected to the host device, it detects the type of communications cable (e.g. USB or RS-232), with which it is connected to the host.

In case of RS-232:

- A version string is sent via RS-232 to the host device.
- A 5 V external power supply is required and must meet the following conditions:
 - PS2 classified power source according to IEC 62368-1
 - Short-circuit current < 8 A

5.3 ENUMERATION

This is only applicable for the USB version: Once the device has been powered up, it is waiting for completion of the enumeration by the USB host. As long as the device is not enumerated, it is entering a minimum power consumption mode, where both LEDs are turned off.

5.4 INITIALIZATION

After powering up and enumeration (in USB mode), the device is turning on the built-in transponder reader logic. The green LED is turned on permanently. Some RFID readers need some kind of initialization, which is performed in this step. After successful initialization, the device sounds a short sequence, which consists of a lower tone followed by a higher tone.

5.5 NORMAL OPERATION

As soon as the reader has completed the initialization, it is entering normal operation. During normal operation, the reader is searching for a transponder continuously.

5.6 DETECTION OF A TRANSPONDER

If a transponder is detected by the reader, following actions are performed:

- Send the ID to the host. By default, the USB device sends by emulating keystrokes of a keyboard. An RS-232 device sends the ASCII code of an ID.
- Sound a beep.
- Turn off the green LED.
- Blink the red LED for two seconds.
- Turn on the green LED.

Within the two seconds timeout, where the red LED is blinking, the transponder, which just has been recognized will not be accepted again. This prevents the reader from sending identical IDs more than one time to the host.



If during the two seconds timeout of the red LED a different transponder is detected, the complete sequence restarts immediately.

5.7 SUSPEND MODE

The USB version of the reader supports the USB suspend mode. If the USB host is signaling suspend via the USB bus, the reader is turning off most of its power consuming peripherals. During this operation mode, no detection of transponders is possible and all LEDs are turned off. Once the host is resuming to normal operation mode, this is also signaled via the USB bus. Therefore, the reader will resume to normal operation too.



6 COMPLIANCE STATEMENTS

6.1 EU

Hereby, ELATEC GmbH declares that TWN4 MultiTech 2 LEGIC is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: elatec.com/approvals

6.2 FCC

Contains FCC ID: WP5TWN4F22 Contains FCC ID: QOQ-BGM220S2

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. (except receivers associated with operation of a licensed radio service and stand-alone devices).

Caution

The Federal Communications Commission (FCC) warns the users that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC §15.105 (b)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

6.3 ISED CANADA

Contains IC: 7948A-TWN4F22 Contains IC: 5123A-BMG220S2

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



6.4 RF EXPOSURE COMPLIANCE

RF exposure statement (mobile and fixed devices)

This device complies with the RF exposure requirements for mobile and fixed devices. However, the device shall be used in such a manner that the potential for human contact during normal operation is minimized.

6.5 SINGAPORE

Complies with IMDA Standard [DA 103787]

6.6 THAILAND / ประเทศไทย



6.7 UNITED KINGDOM

TWN4 MultiTech 2 LEGIC complies with the requirements of the UK legislations and other regulations as listed in the respective UK declaration of conformity. The importer is responsible for applying the following information to the packaging of the product:



- the importer company's details, including the company's name and a contact address in the United Kingdom.
- UKCA marking



APPENDIX

A – RELEVANT DOCUMENTATION

ELATEC documentation


- ELATEC quick start guide
- TWN4 MultiTech 2 LEGIC data sheet
- TWN4 MultiTech 2 LEGIC functional description
- TWN4 MultiTech 2 technical handbook

B-TERMS AND ABBREVIATIONS

TERM	EXPLANATION
BLE	Bluetooth Low Energy
FCC	Federal Communications Commission
HF	high frequency
ISED	Innovation, Science and Economic Development Canada
LED	light-emitting diode
LF	low frequency
NFC	near field communication
PCB	printed circuit board
RFID	radio frequency identification
SDK	software development kit
UKCA	UK conformity assessed
WEEE	Waste of electrical and electronic equipment.
**EEE	Refers to Directive 2012/19/EU of the European Parliament and of the Council of the European Union

C - REVISION HISTORY

VERSION	CHANGE DESCRIPTION	EDITION
02	Editorial changes, chapters "Technical Data" and "Compliance Statements" updated	07/2023
01	First edition	05/2023

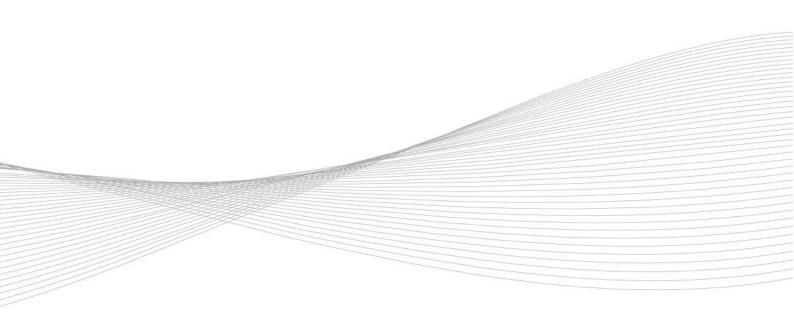

elatec.com

EMEA

Puchheim, Germany +49 89 552 9961 0 sales-rfid@elatec.com **AMERICAS**

Palm City, Florida, USA +1 772 210 2263 americas-info@elatec.com **ASIA**

Shenzhen, China +86 755 23946014 apac-info@elatec.com **JAPAN**

Tokyo, Japan +81 90 1846 6900 japan-info@elatec.com

Elatec reserves the right to change any information or data in this document without prior notice. Elatec declines all responsibility for the use of this product with any other specification but the one mentioned above. Any additional requirement for a specific customer application has to be validated by the customer himself at his own responsibility. Where application information is given, it is only advisory and does not form part of the specification. Disclaimer: All names used in this document are registered trademarks of their respective owners.