TWN4 USB FRONT READER

USER MANUAL





TABLE OF CONTENTS

1		INTRODUCTION	3
	1.1	ABOUT THIS MANUAL	3
	1.2	SCOPE OF DELIVERY	3
	1.3	ELATEC SUPPORT	3
2		INTENDED USE	4
3		SAFETY INFORMATION	5
4		TECHNICAL DATA	7
	4.1	TECHNICAL SPECIFICATIONS	7
	4.2	FIRMWARE	7
	4.3	ANTENNAS	7
5		MODE OF OPERATION	8
	5.1	OPERATING MODE	8
	5.2	POWER UP	8
	5.3	ENUMERATION	8
	5.4	INITIALIZATION	8
	5.5	NORMAL OPERATION	8
	5.6	DETECTION OF A TRANSPONDER	8
	5.7	SUSPEND MODE	9
6		COMPLIANCE STATEMENTS	10
	6.1	EU	10
	6.2	FCC	10
	6.3	ISED CANADA	10
	6.4	ARGENTINA	11
	6.5	BRAZIL / BRASIL	11
	6.6	CHINA (PRC) / 中华人民共和国	11
	6.7	MEXICO / MÉXICO	13
	6.8	SINGAPORE	13
	6.9	TAIWAN / 臺灣	13
	6.10	O THAILAND / ประเทศไทย	13
	6.11	1 UKRAINE / УКРАЇНА UA	13
	6.12	2 UNITED KINGDOM	14
ΑF	PEN	DIX	15
	A –	RELEVANT DOCUMENTATION	15
	B – TERMS AND ABBREVIATIONS		
	C –	REVISION HISTORY	15



1 INTRODUCTION

1.1 ABOUT THIS MANUAL

This user manual is intended for the user and enables a safe and appropriate handling of the product. It gives a general overview, as well as important technical data and safety information about the product. Before using the product, the user should read and understand the content of this user manual.

For the sake of better understanding and readability, this user manual might contain exemplary pictures, drawings and other illustrations. Depending on your product configuration, these pictures might differ from the actual design of your product.

The original version of this user manual has been written in English. Wherever the user manual is available in another language, it is considered as a translation of the original document for information purposes only. In case of discrepancy, the original version in English will prevail.

1.2 SCOPE OF DELIVERY

Depending on your product configuration, the product can be delivered alone or with different components and accessories, such as cables or wall holders, as part of a kit. For more information about the delivered components and accessories, refer to your delivery note, consult the ELATEC website or contact ELATEC.

1.3 ELATEC SUPPORT

In case of any technical questions or product malfunction, refer to the ELATEC website (www.elatec.com) or contact ELATEC technical support at

support-rfid@elatec.com

In case of questions regarding your product order, contact your Sales representative or ELATEC customer service at info-rfid@elatec.com



2 INTENDED USE

The devices of the TWN4 USB Front Reader family are an excellent solution for any RFID-based applications that require a direct and simple connection per USB. All readers are available with an NXP or LEGIC frontend and support RFID, NFC and Bluetooth Low Energy (BLE) technologies. In addition, the patented USB connector on the rear side can be turned to 90°, which enables a quick and easy installation into any host system equipped with a USB port. Thanks to their compact form and enhanced read/write performance, the readers are particularly appropriate as a secure printing solution, but also for Single-Sign on and healthcare applications.

Key features of the TWN4 USB Front Reader include a USB hub on the front side that can be deactivated via device driver, a powerful SDK for writing apps that are executed directly on the reader and an integrated BLE module. Additionally, the reader can read more than 60 RFID technologies from low (LF) and high frequency (HF) bands, including NFC. This gives the option to select as many of the technologies required instead of being forced to select just a few ones.

The product is for indoor use and may not be used outdoor.

Any use other than the intended use described in this section, as well as any failure to comply with the safety information given in this document, is considered improper use. ELATEC excludes any liability in case of improper use or faulty product installation.



3 SAFETY INFORMATION

Transport and storage

• Observe carefully the transport and storage conditions described on the product packaging or other relevant product documents (e.g. data sheet).

Unpacking and installation

- Before unpacking and installing the product, this user manual and all relevant installation instructions must be read and understood carefully.
- The product might show sharp edges or corners and requires a particular attention during the unpacking and installation.
 Unpack the product carefully and do not touch any sharp edges or corners, or any sensitive components on the product.
 If necessary, wear safety gloves.
- In order to comply with the applicable RF exposure requirements, the product should be installed and operated with a minimum distance to any user's/nearby person's body at all times. Refer to Chapter "Compliance statements" for further information about RF exposure compliance.

Handling

- Depending on your product configuration, the product might be equipped with one or more light-emitting diodes (LED).
 Avoid direct eye contact with the blinking or steady light of the light-emitting diodes.
- The product has been designed for a use under specific conditions, e.g. in a specific temperature range (refer to the product data sheet).
 - Any use of the product under different conditions might damage the product or alter its reading performance.
- The use of other RFID readers or reader modules in direct vicinity to the product, or in combination with the product might damage the product or alter its reading performance. In case of doubts, contact ELATEC for more information.
- The user is liable for the use of spare parts or accessories other than the ones sold or recommended by ELATEC.
 ELATEC excludes any liability for damages or injuries resulting from the use of spare parts or accessories other than the ones sold or recommended by ELATEC.
- Like most electronic devices, RFID systems generate electromagnetic waves that can vary in amplitude and frequency. It is generally known and accepted that some RFID devices might potentially interfere with personal medical devices, like pacemakers or hearing aids.
 - TWN4 USB Front Reader fulfills general radio and EMC requirements. However, users with a pacemaker or any other medical device should use TWN4 USB Front Reader carefully and refer to the information given by the manufacturer of their medical devices before using TWN4 USB Front Reader or any host device containing TWN4 USB Front Reader.

Maintenance and cleaning

- Any repair or maintenance work should be done by a trained and qualified personnel only.
 Do not try to repair or carry out any maintenance work on the product by yourself.
 Do not allow any repair or maintenance work on the product by an unqualified or unauthorized third party.
- The product does not need any special cleaning. However, the housing may be carefully cleaned up with a soft, dry cloth and a
 non-aggressive or non-halogenated cleaning agent on the outer surface only.
 Make sure that the used cloth and cleaning agent do not damage the product or its components (e.g. label(s)).



Disposal

• The product must be disposed of in accordance with the EU directive on waste electrical and electronic equipment (WEEE) or any applicable local regulations.

Product modifications

The product has been designed, manufactured and certified as defined by ELATEC.
 Any product modification without prior written approval from ELATEC is prohibited and considered improper use of the product. Unauthorized product modifications may also result in the loss of product certifications.

If you are unsure about any part of the safety information above, contact ELATEC support.

Any failure to comply with the safety information given in this document is considered improper use. ELATEC excludes any liability in case of improper use or faulty product installation.



4 TECHNICAL DATA

4.1 TECHNICAL SPECIFICATIONS

FREQUENCIES	125 kHz (LF) / 13.56 MHz (HF) / 2.4 GHz (BLE)
ANTENNAS	Integrated
HOUSING	Material: ABS UL94-V0
110031110	Color: black
DIMENSIONS (L X W X H)	Approx. 60 x 39 x 16.50 mm / 2.36 x 1.54 x 0.65 inch
POWER	USB: 4.3 V - 5.5 V
rower	PS2 classified power source according to IEC 62368-1, short-circuit current < 8 A
CURRENT CONSUMPTION	RF field on: 250 mA typically + 16 mA (BLE)
TEMPERATURE RANGE	Operating: 0 °C up to +65 °C (+32 °F up to +149 °F)
TEMPERATURE RANGE	Storage: -40 °C up to +70 °C (-40 °F up to +158 °F)
RELATIVE HUMIDITY	5% to 95% non-condensing
READ/WRITE DISTANCE	LF and HF: up to 45 mm / 1.77 inch, depending on environment and transponder
WEIGHT	Approx. 22 g / 0.78 oz

4.2 FIRMWARE

The product is delivered ex-works with a specific firmware version. Refer to the label attached to the product to find the firmware version installed ex-works.

4.3 ANTENNAS

The reader is equipped with the following antennas:

HF antenna (13.56 MHz)

Dimensions: 48 x 33 mm / 1.89 x 1.30 inch

Number of turns: 3

LF antenna (125 kHz)

Dimensions: 48 x 33 mm / 1.89 x 1.30 inch

Number of turns: 128

BLE (2.4 GHz)

The antenna for the BLE module is integrated in the BLE chip.

For more information, refer to the related product data sheet or other technical documents.



5 MODE OF OPERATION

The mode of operation described in the following chapter is based on a standard ELATEC RFID reader equipped with two LEDs. Depending on your product (number of LEDs, installed firmware, etc.) and in case the product settings have been modified with the AppBlaster tool, the information below might differ from your product configuration when in operation. In particular, the color and sequence of the LEDs on your product might be different.

5.1 OPERATING MODE

In order to start operating TWN4 USB Front Reader, it simply has to be connected directly to a host device. TWN4 USB Front Reader is not designed to be operated with any extension lead.

5.2 POWER UP

In case of an external power supply unit is used, the following requirements must be satisfied:

- PS2 classified power source according to IEC 62368-1
- Short-circuit current < 8 A

5.3 ENUMERATION

Once the device has been powered up, it is waiting for completion of the enumeration by the USB host. As long as the device is not enumerated, it is entering a minimum power consumption mode.

5.4 INITIALIZATION

After powering up and enumeration, the device is turning on the built-in transponder reader logic. The green LED is turned on permanently. Some RFID readers need some kind of initialization, which is performed in this step. After successful initialization, the device sounds a short sequence, which consists of a lower tone followed by a higher tone.

5.5 NORMAL OPERATION

As soon as the reader has completed the initialization, it is entering normal operation. During normal operation, the reader is searching for a transponder continuously.

5.6 DETECTION OF A TRANSPONDER

If a transponder is detected by the reader, following actions are performed:

- Send the ID to the host. By default, the USB device sends by emulating keystrokes of a keyboard.
- Sound a beep.
- Turn off the green LED.
- Blink the red LED for two seconds.
- Turn on the green LED.

Within the two seconds timeout, where the red LED is blinking, the transponder, which just has been recognized will not be accepted again. This prevents the reader from sending identical IDs more than one time to the host. If during the two seconds timeout of the red LED a different transponder is detected, the complete sequence restarts immediately.



5.7 SUSPEND MODE

The reader supports the USB suspend mode. If the USB host is signaling suspend via the USB bus, the reader is turning off most of its power consuming peripherals. During this operation mode, no detection of transponders is possible and all LEDs are turned off. Once the host is resuming to normal operation mode, this is also signaled via the USB bus. Therefore, the reader will resume to normal operation too.



6 COMPLIANCE STATEMENTS

6.1 EU

Hereby, ELATEC GmbH declares that TWN4 USB Front Reader is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: elatec.com/approvals

RF exposure statement

TWN4 USB Front Reader complies with EU radiation exposure limits set forth for an uncontrolled environment under the following conditions: The equipment should be installed and operated such that a minimum separation distance of 5 cm is maintained between the antenna and user's/nearby person's body at all times.

6.2 FCC

Contains FCC ID: WP5TWN4F4
Contains FCC ID: QOQBGM12LMA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. (except receivers associated with operation of a licensed radio service and stand-alone devices).

Caution

The Federal Communications Commission (FCC) warns the users that changes or modifications to the unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC §15.105 (b)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure statement

TWN4 USB Front Reader complies with FCC radiation exposure limits set forth for an uncontrolled environment under the following conditions: This equipment should be installed and operated such that a minimum separation distance of 20 cm is maintained between the antenna and user's/nearby person's body at all times.

6.3 ISED CANADA

Contains IC: 7948A-TWN4F4 Contains IC: 5123A-BGM12LMA

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:



- 1. This device may not cause interference.
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:


- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF exposure statement / Déclaration de conformité aux limites d'exposition humaine aux radiofréquences

TWN4 USB Front Reader complies with ISED radiation exposure limits set forth for an uncontrolled environment under the following conditions: This equipment should be installed and operated such that a minimum separation distance of 20 cm is maintained between the antenna and user's/nearby person's body at all times.

TWN4 USB Front Reader est conforme aux limites d'exposition humaine aux radiofréquences d'Innovation, Sciences et Développement économique Canada établies pour un environnement non contrôlé, dès lors que les conditions suivantes sont respectées: Le présent appareil doit être installé et utilisé à une distance minimale de 20 cm de toute personne.

6.4 ARGENTINA



6.5 BRAZIL / BRASIL

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

6.6 CHINA (PRC) / 中华人民共和国

Micropower scope of use declaration:

TWN4 USB Front Reader supports transmission frequencies of 13.56 MHz and 125 kHz. The user needs to adhere to the following specifications when using the product:

(1) The specific provisions listed in the "catalog and the technical specifications for micropower short-range radio transmission equipment" as well as the usage scenarios for the antenna type used, the functions, and the customary use of the control system, regulation, and switches must be complied with;

Transmission power:

13.56 MHz: ≤ -7.45 dB μ A/m

(field strength at 10 meters, standard max value)

125 kHz: ≤ -1.87 dB μ A/m

(field strength at 10 meters, standard max value)

Antenna: built-in antenna (cannot be removed)

微功率使用规范声明:

TWN4 USB Front Reader 支持 13.56MHz 和 125kHz 发射 频率,用户在使用过程中,需要遵守以下要求:

(一) 符合"微功率短距离无线电发射设备目录和技术 要求"的具体条款和使用场景,采用的天线类型 和性能,控制、调整及开关等使用方法;

发射功率:

13.56MHz: ≤ -7.45dBμA/m (10 米处场强, 准峰值) 125kHz: ≤ -1.87dBμA/m (10 米处场强, 准峰值)

天线: 内置天线(不可拆卸)

控制、调整及开关:用户不能控制、调制及开关

此无线电发射功能



Control system, regulation, and switches: The user cannot control, regulate, or switch over the radio transmission function of the antenna.

- (2) The unauthorized modification of usage scenarios or the conditions of use, expansion of the transmission frequency range, or increase of the transmission power (including installing additional transmission power amplifiers), as well as the unauthorized modification of the transmission antenna are not allowed:
- (3) The product may not interfere in any way with any legal radio transmitters (stations) and may not offer any shielding from harmful interference:
- (4) The product must be able to tolerate interference caused by industrial, scientific, and medical (ISM) devices which radiate high frequency energy or other legal interference from radio transmitters (stations);
- (5) Should the product cause harmful interference on other legal radio transmitters (stations), product use must be discontinued immediately and suitable measures must be taken prior to using the product again in order to eliminate said interference;
- (6) When using micropower devices inside of an aircraft or radiometric observatories, or when using such devices in meteorological radar stations, satellite ground stations (including measuring and control stations, distance measuring stations, receiving stations, or navigation stations), as well as in radio transmitters (stations) used by the military and electromagnetic environment protections zones at airports, all applicable provisions of the competent authorities as well as statutory provisions, national regulations, and national standards must be complied with;
- (7) Remote controls of any kind may not be used within 5000 meters of airport runways, measured from the middle of the runway;
- (8) Ambient conditions such as temperature and voltage when using micropower devices:

operating voltage of TWN4 USB Front Reader: 4.3 V – 5.5 V (charging via USB),

operating temperature: $0 \, ^{\circ}\text{C} - 65 \, ^{\circ}\text{C}$, storage temperature: $-40 \, ^{\circ}\text{C} - 70 \, ^{\circ}\text{C}$.

The user must strictly adhere to these temperature and voltage specifications when using the product.

- (二)不得擅自改变使用场景或使用条件、扩大发射频率范围、加大发射功率(包括额外加装射频功率放大器),不得擅自更改发射天线;
- (三)不得对其他合法的无线电台(站)产生有害干扰,也不得提出免受有害干扰保护;
- (四)应当承受辐射射频能量的工业、科学及医疗(ISM)应用设备的干扰或其他合法的无线电台(站)干扰;
- (五)如对其他合法的无线电台(站)产生有害干扰时,应立即停止使用,并采取措施消除干扰后方可继续使用;
- (六)在航空器内和依据法律法规、国家有关规定、标准划设的射电天文台、气象雷达站、卫星地球站(含测控、测距、接收、导航站)等军民用无线电台(站)、机场等的电磁环境保护区域内使用微功率设备,应当遵守电磁环境保护及相关行业主管部门的规定;
- (七)禁止在以机场跑道中心点为圆心、半径 **5000**米的 区域内使用各类模型遥控器;
- (八)微功率设备使用时温度和电压的环境条件。 TWN4 USB Front Reader 的工作电压 4.3V-5.5V(USB 供电),

工作温度 0℃~65℃, 储存温度-40℃~70℃。

用户需严格按照此温度和电压要求使用。



6.7 MEXICO / MÉXICO

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) Es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

6.8 SINGAPORE

Complies with IMDA Standard [DA 103787]

6.9 TAIWAN / 臺灣

注意!

取得審驗證明之低功率射頻器材,非經核准,公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。前述合法通信,指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

6.10 THAILAND / ประเทศไทย



6.11 UKRAINE / YKPAÏHA UA

Технічний регламент радіообладнання, затвердженого Постановою Кабінету Міністрів України від 24 травня 2017 р. №355: справжнім «ELATEC GmbH» (Zeppelinstrasse 1, 82178 Puchheim, Germany/Німеччина) заявляє, що тип радіообладнання: Пристрій радіочастотної ідентифікації [RFID Reader/Writer 125 kHz, 13,56 MHz] т.м. «ELATEC» моделі TWN4 USB Front Reader відповідає Технічному регламенту радіообладнання.

ОСНОВНІ ХАРАКТЕРИСТИКИ

Радіотехнологія	Смуги радіочастот	Максимальна потужність випромінювання
LF RFID	119 – 140 кГц	Мінус 1,87 дБмкА/м, Напруженість магнітного поля, виміряна на відстані 10 м



HF RFID	13,553 – 13,567 МГц	Мінус 7,45 дБмкА/м, Напруженість магнітного поля, виміряна на відстані 10 м
---------	---------------------	---

6.12 UNITED KINGDOM

TWN4 USB Front Reader complies with the requirements of the UK legislations and other regulations as listed in the respective UK declaration of conformity. The importer is responsible for applying the following information to the packaging of the product:



- the importer company's details, including the company's name and a contact address in the United Kingdom.
- UKCA marking



APPENDIX

A – RELEVANT DOCUMENTATION

ELATEC documentation


- ELATEC quick start guide
- TWN4 USB Front Reader data sheet
- TWN4 USB Front Reader technical handbook

B – TERMS AND ABBREVIATIONS

TERM	EXPLANATION
BLE	Bluetooth Low Energy
FCC	Federal Communications Commission
HF	high frequency
ISED	Innovation, Science and Economic Development Canada
LED	light-emitting diode
LF	low frequency
NFC	near field communication
RFID	radio frequency identification
SDK	software development kit
UKCA	UK conformity assessed
WEEE	Waste of electrical and electronic equipment. Refers to Directive 2012/19/EU of the European Parliament and of the Council of the European Union

C - REVISION HISTORY

VERSION	CHANGE DESCRIPTION	EDITION	
	Editorial changes, product pictures updated, chapters "Scope of Delivery", "Intended Use",		
06	"Safety Information", "Technical Data", "Mode of Operation" and "Compliance Statements"	09/2023	
	updated		
05	Chapter "Compliance Statements" updated	09/2022	
04	Chapter "Compliance Statements" updated	07/2022	
03	Chapters "Introduction", "Intended Use", "Safety Information", "Mode of Operation" and	02/2022	
03	"Compliance Statements" updated		
	Sections "Handling" updated and "Product modifications" added under chapter 3 "Safety		
02	information", compliance statement for Taiwan updated, compliance statement for Thailand	06/2021	
	added		
01	First edition	05/2021	
U I	(replaces RFID Reader TWN4 USB Front Reader Manual, Rev 5.0, dated 11/2018)	03/2021	

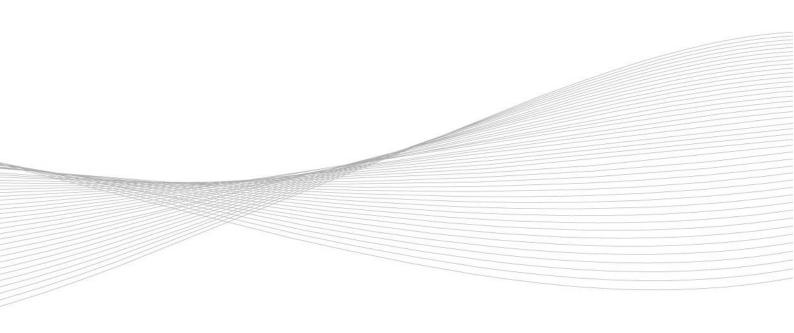

elatec.com

EMEA

Puchheim, Germany +49 89 552 9961 0 sales-rfid@elatec.com **AMERICAS**

Palm City, Florida, USA +1 772 210 2263 americas-info@elatec.com **ASIA**

Shenzhen, China +86 755 23946014 apac-info@elatec.com **JAPAN**

Tokyo, Japan +81 90 1846 6900 japan-info@elatec.com

Elatec reserves the right to change any information or data in this document without prior notice. Elatec declines all responsibility for the use of this product with any other specification but the one mentioned above. Any additional requirement for a specific customer application has to be validated by the customer himself at his own responsibility. Where application information is given, it is only advisory and does not form part of the specification. Disclaimer: All names used in this document are registered trademarks of their respective owners.